




# Disassembling Griffin iFM 4027 Right Side Panel (Screen Side Up)

This guide will teach the user how to detach the right side panel and its associated buttons.

Written By: Alexander

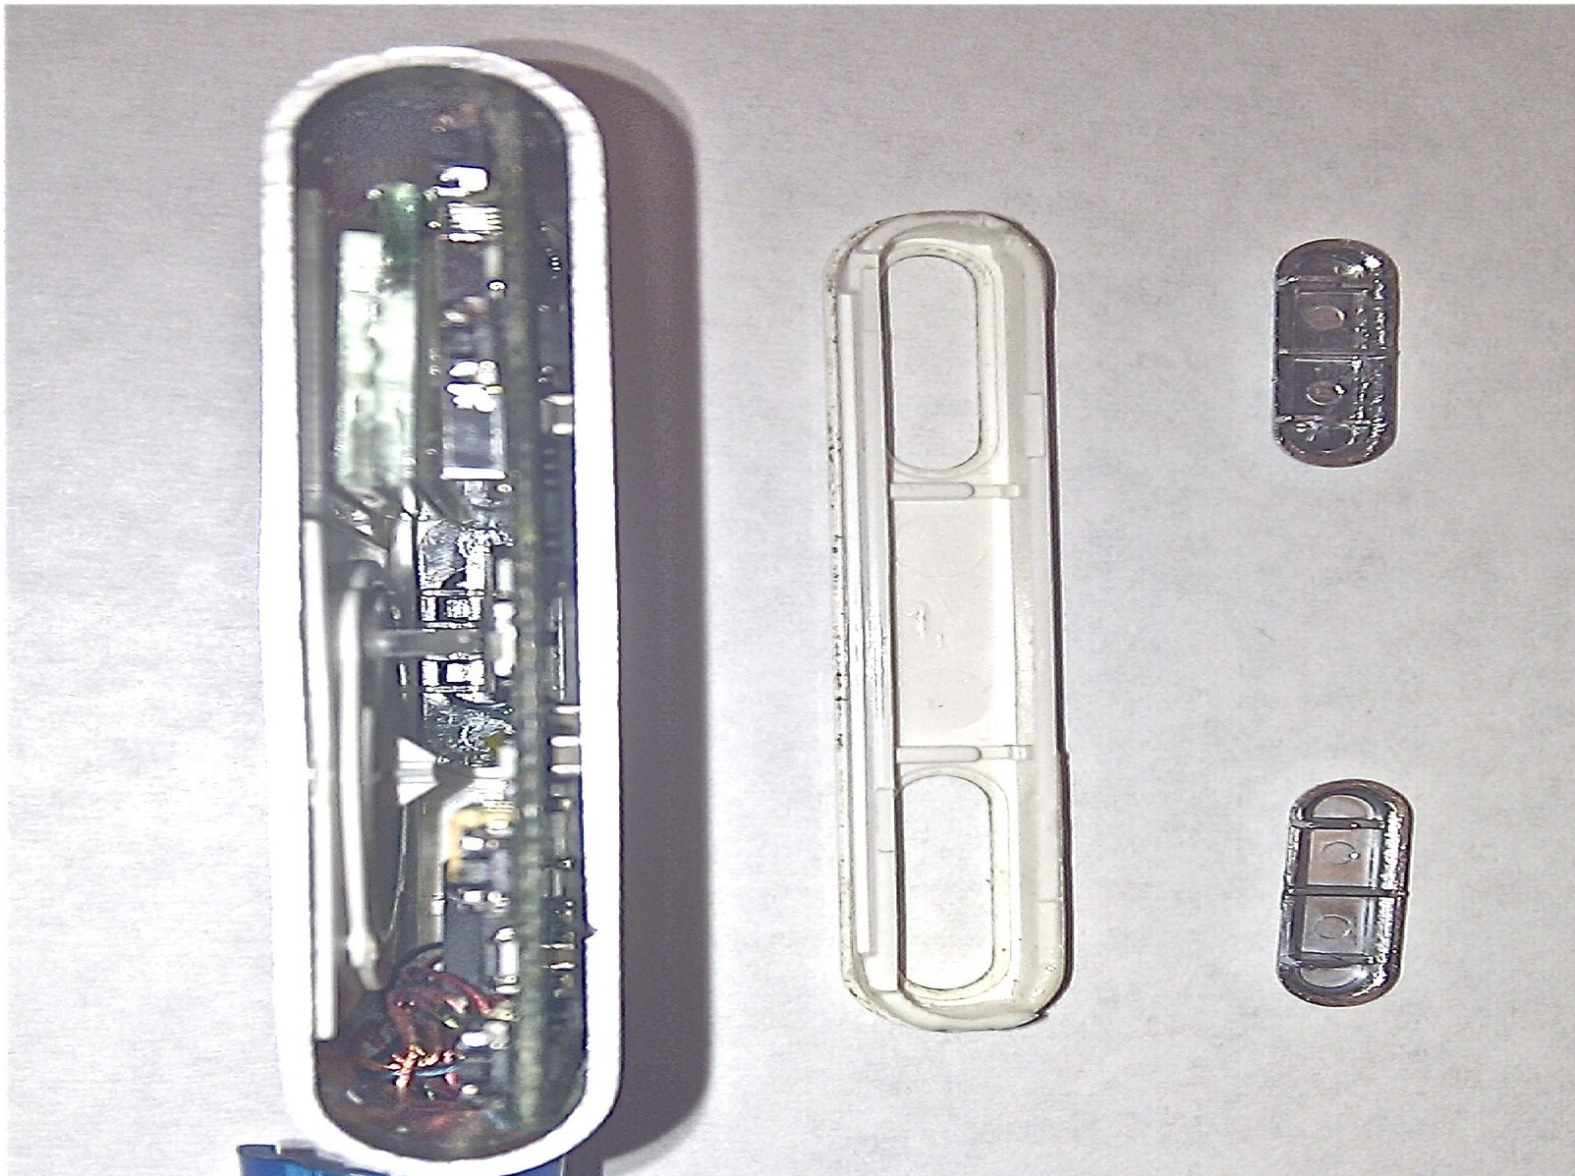

## INTRODUCTION

A side panel is located on each side of the device. The right side panel contains the buttons which controls the track being selected as well as the volume of the device. There are no prerequisites required for this guide, but a pry bar is necessary to remove the panel.




### TOOLS:

- [iFixit Opening Tools](#) (1)
-




## Step 1 — Right Side Panel (Screen Side Up)

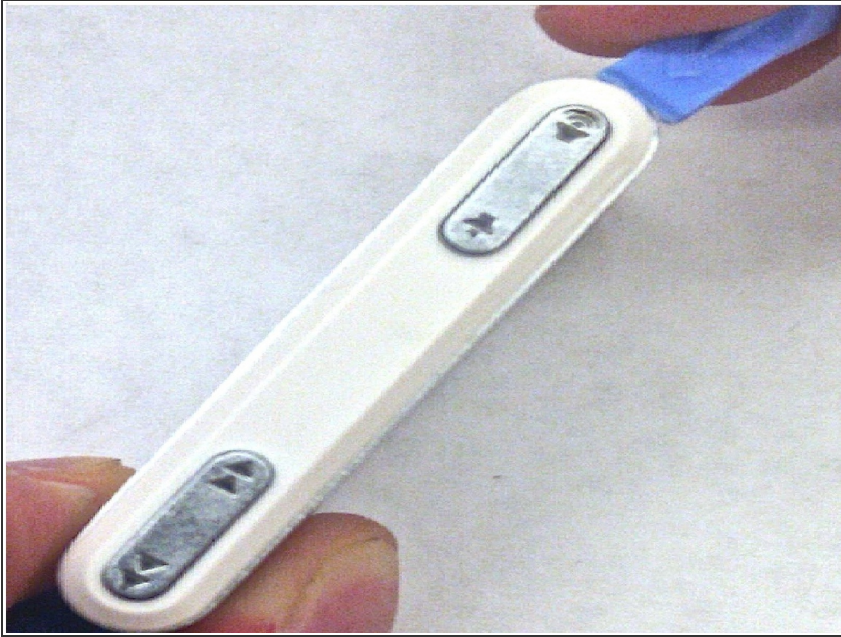

- Use the plastic opening tool to lodge its tip into the corner of the device, applying upward pressure on the edge of the panel until the corner is released.

## Step 2

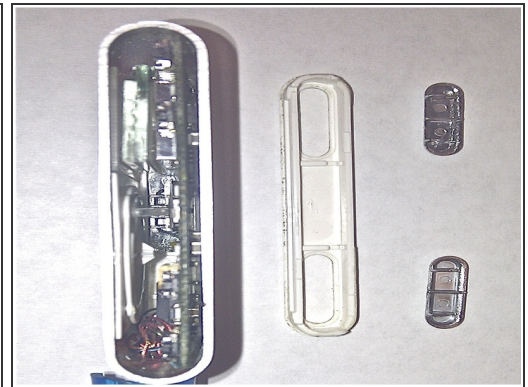

- The side panel should now be easily detached using your fingers.
- The side panel's buttons can be dislodged by turning the panel over and shaking it if necessary.

After disassembly, the device components should look similar to that which is depicted in the cover image (top right of page).

This document was last generated on 2017-06-26 05:14:40 PM.